DW012

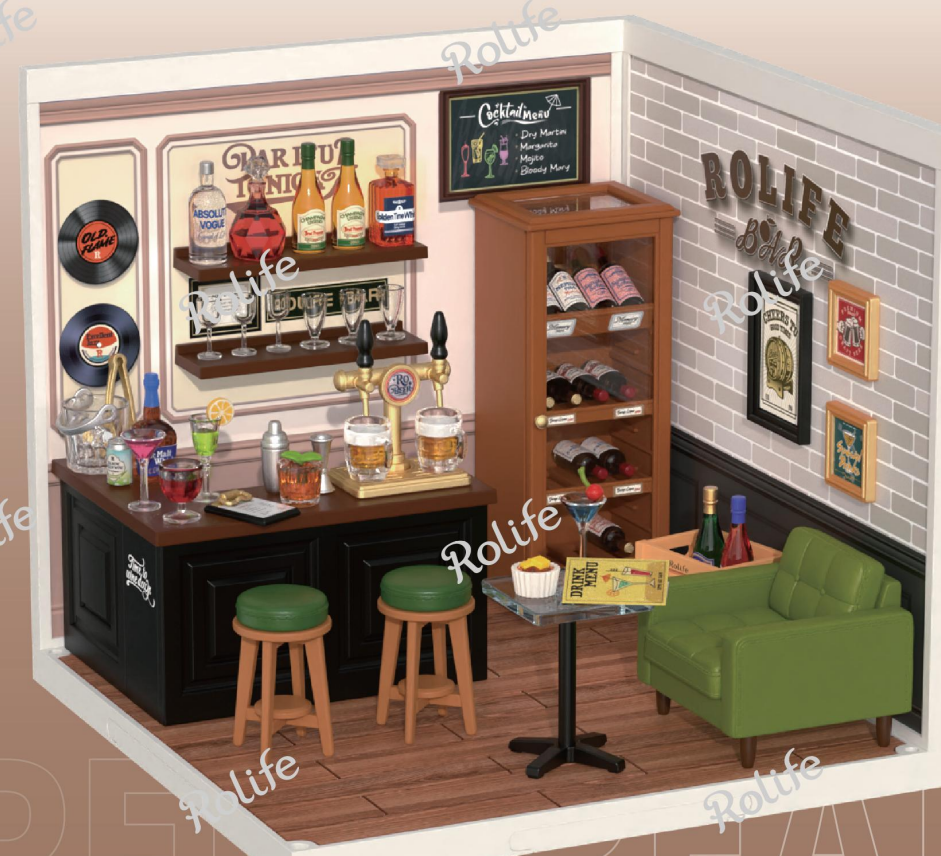

SUPER CREATOR | SUPER STORE | LEISURELY CHEERS BAR

The picture is for reference only.

Rolife

Assembly Tips

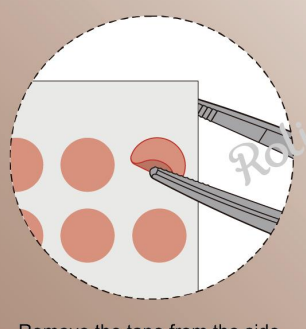
Remove the tape from the side with the tip of the tweezers.

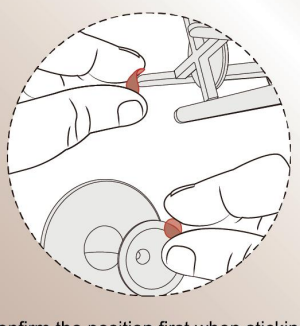
Confirm the position first when sticking the tape on non-flat surfaces, and then remove the film.

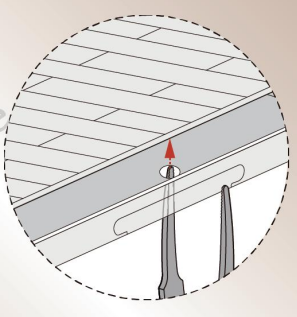
Push upwards with the tip of the tweezers to remove the floor.

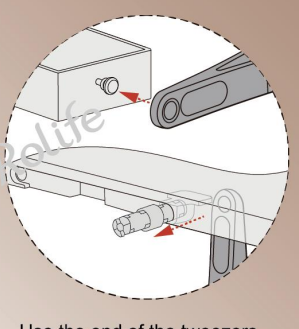
Use the end of the tweezers to remove the connecting nail or assemble small parts.

01 Notice

⚠ WARNING

- Not suitable for children under 3 years old.
- The product shall only be used with a transformer for product or a power supply for it.
- The product shall be used with the power supply supplied, if the transformer is supplied with the product.
- The transformer or power supply is not a toy or model.
- Misuse of transformer can cause electrical shock.
- The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Do not connect the wire to output socket.
- The product is not to be connected to more than the recommended number of power supplies.
- This product doesn't need liquid cleaning, and please clean it with clean soft cloth.
- Please keep the product away from substances flammable and humid environments to prevent damage.
- The instruction must be retained since it contains important information.

02 Icon

Please secure parts as shown in case of any parts loosening:

Use double-sided adhesive dot

Use strip double-sided tape

Special attention in assembly

Perspective changed

① Step 1 ② Step 2 Force point

03 Switch box instructions

① Switch

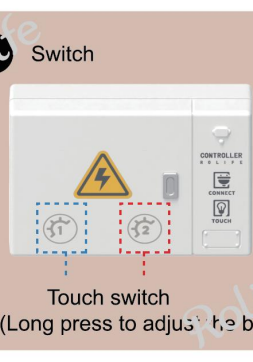
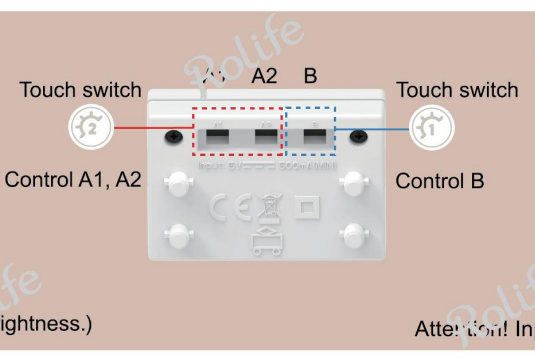
Touch switch
A1 A2 B
Touch switch
Control A1, A2
Control B

Touch switch
(Long press to adjust the brightness.)

② Power-on

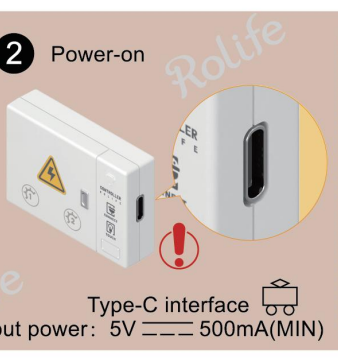
Type-C interface

Attention! Input power: 5V ⎓ 500mA(MIN)

Power-on suggestions:
1.Use the provided double-ended Type-C cable to connect to an external Type-C power output port (e.g. power bank).
2.Use a self-provided Type-C cable to connect to an external Type-C power source (e.g. power adapter).
3.This product is only to be connected to equipment of Class Ⅱ.

04 Part list

(Check if there are missing parts. If so, provide customer service with corresponding part names to get the parts.)

Package

Name	Instruction	Part Bag No.1-7	Connecting part bag	Light part bag	Tweezers	Dual Type-C cable
Illustration		 DW012 1 – DW012 7	 Connecting parts	 Light parts		
Quantity	1	7	1	1	1	1

Connecting part

Name	Connecting stick	Connecting nail
Illustration		
Quantity	1	4

Light part

Name	Switch box	Long ceiling light
Illustration		
Quantity	1	1

Bag No.1

Name	P1	Side wall	Back wall	Bottom board	L-shaped stick
Illustration					
Quantity	1	1	1	1	1

Bag No.2

Name	Double-sided adhesive dot (40pcs)	Strip double-sided tape (10pcs)	Double-sided adhesive dot (20pcs)	Wallpaper 1	Wallpaper 2	Wallpaper 3	Wallpaper 4	Sticker
Illustration								
Quantity	1	1	1	1	1	1	1	1

Bag No.3

Name	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13
Illustration												
Quantity	4	2	1	2	3	3	1	1	2	1	1	1

Bag No.4

Name	P14	P15	P16	P17	P18	P19	P20	P21	P22	P23	P24	P25
Illustration												
Quantity	1	1	1	3	1	1	1	4	5	6	1	1

Bag No.5		
Name	P26	P27
Illustration		
Quantity	1	1

Bag No.5						
Name	P28	P29	P30	P31	P32	P33
Illustration						
Quantity	1	1	1	1	1	3

Bag No.6											
Name	P34	P35	P36	P37	P38	P39	P40	P41	P42	P43	P44
Illustration											
Quantity	1	1	1	1	1	1	1	2	2	2	2

Bag No.6										
Name	P45	P46	P47	P48	P49	P50	P51	P52	P53	P54
Illustration										
Quantity	2	1	1	1	1	1	1	1	1	1

Bag No.6									
Name	P55	P56	P57	P58	P59	P60	P61	P62	P63
Illustration									
Quantity	1	1	1	1	1	1	1	1	1

Bag No.7	
Name	P64
Illustration	
Quantity	4

Bag No.7										
Name	P65	P66	P67	P68	P69	P70	P71	P72	P73	P74
Illustration										
Quantity	1	1	1	1	1	2	2	2	2	2

Bag No.7									
Name	P75	P76	P77	P78	P79	P80	P81	P82	P83
Illustration									
Quantity	1	1	1	1	1	1	1	1	1

---

04 Assembling instructions

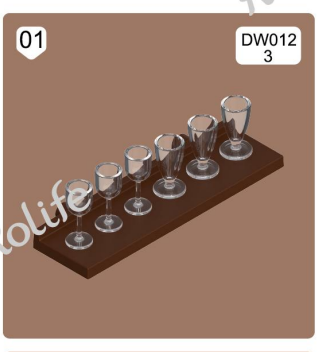

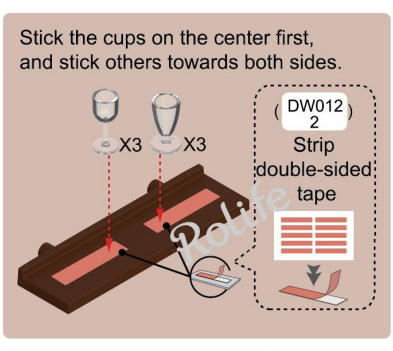
Stick the cups on the center first, and stick others towards both sides.
X3
X3
DW012
2
Strip double-sided tape

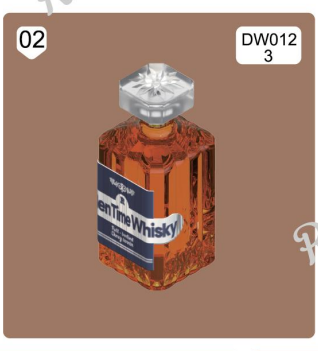

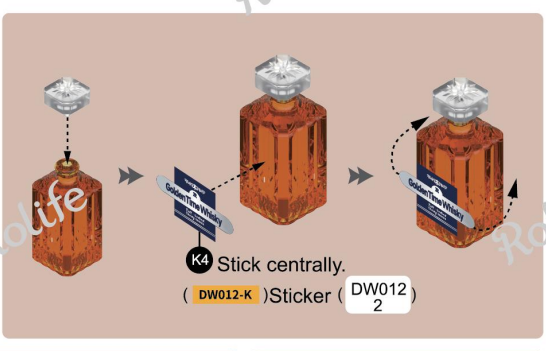
K4 Stick centrally.
(DW012-K)Sticker (DW012
2)

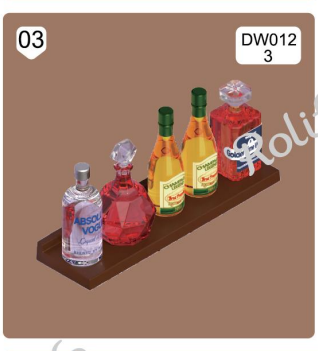

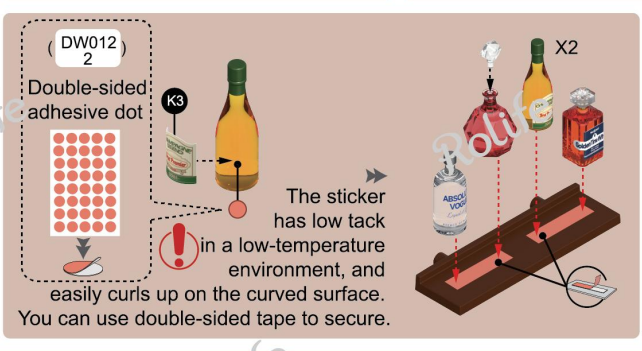
(DW012
2)
Double-sided adhesive dot
K3
X2
The sticker has low tack in a low-temperature environment, and easily curls up on the curved surface. You can use double-sided tape to secure.

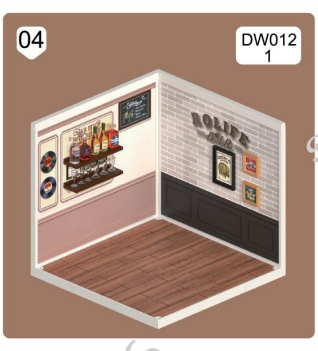

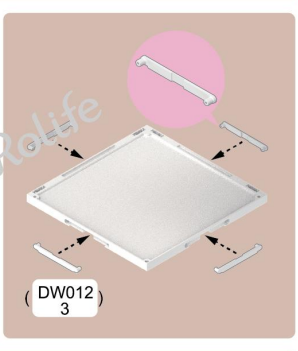

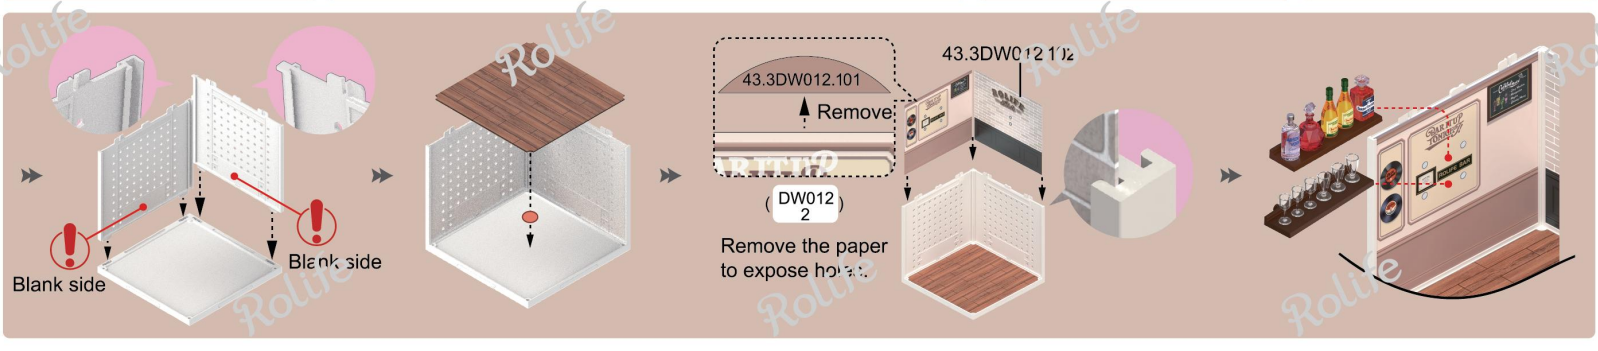
Blank side
Blank side
43.3DW012.101
Remove
(DW012
2)
43.3DW012.102
Remove the paper to expose holes.

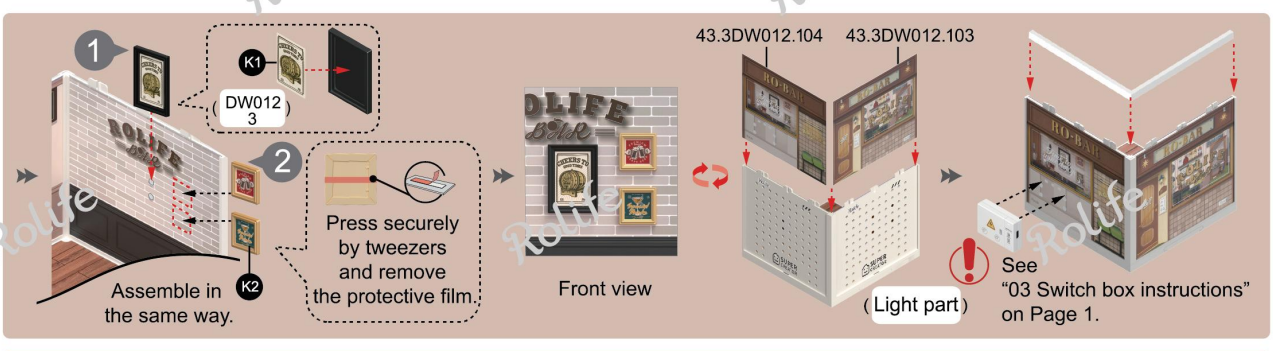
1
K1
(DW012
3)
2
K2
43.3DW012.104
43.3DW012.103
(Light part)
Assemble in the same way.

Press securely by tweezers and remove the protective film.

Front view

See "03 Switch box instructions" on Page 1.

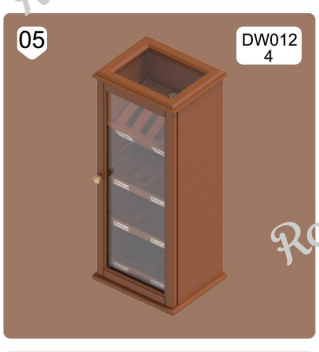

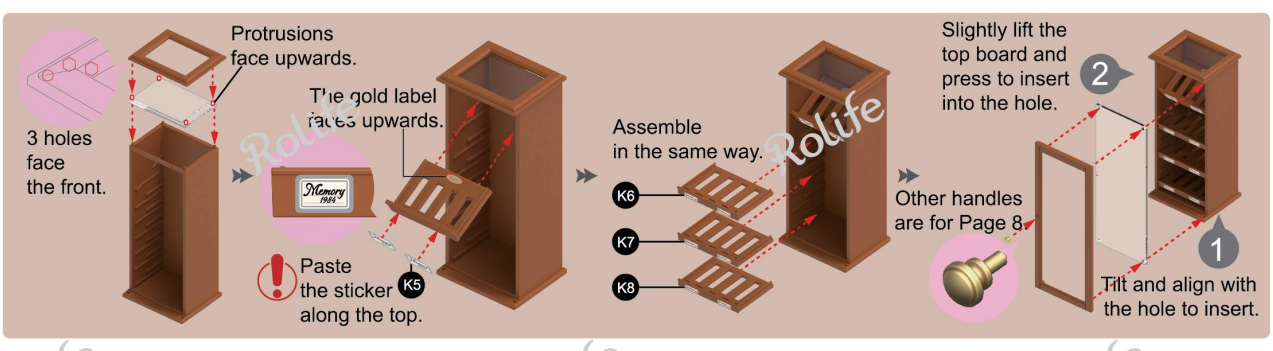
K5
K6
K7
K8
2
1
3 holes face the front.

Protrusions face upwards.

The gold label faces upwards.

Paste the sticker along the top.

Assemble in the same way.

Other handles are for Page 8.

Slightly lift the top board and press to insert into the hole.

Tilt and align with the hole to insert.

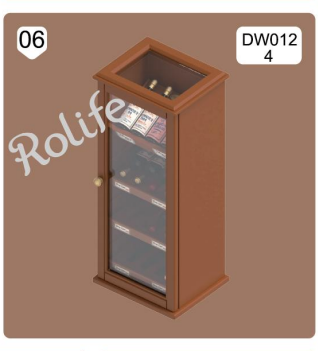

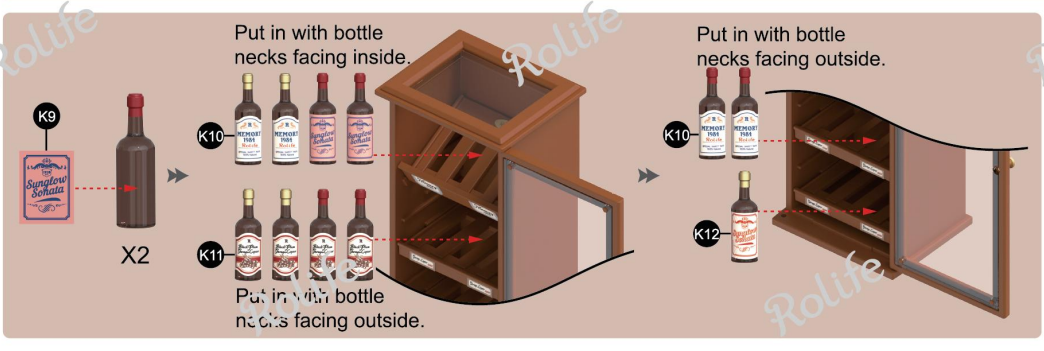
K9
X2
K10
K11
K10
K12
Put in with bottle necks facing inside.

Put in with bottle necks facing outside.

Put in with bottle necks facing outside.

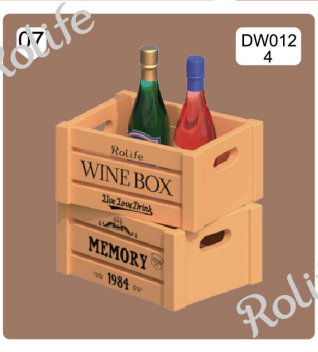



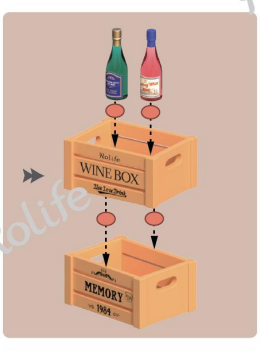

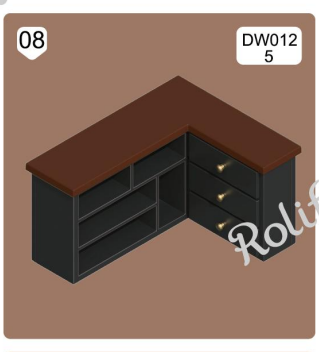

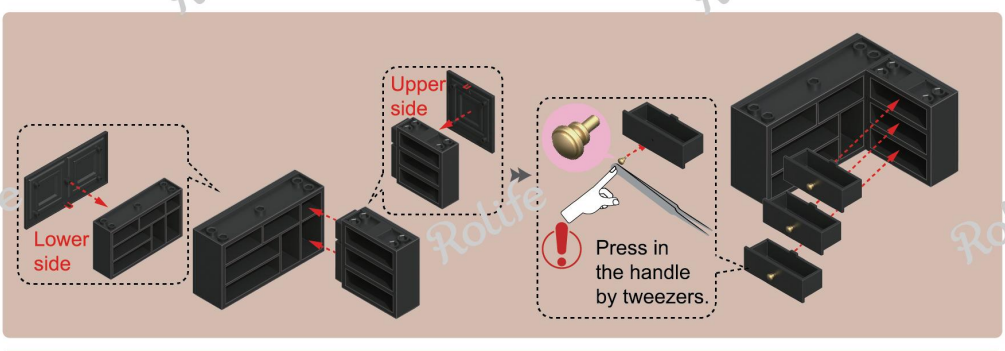
Lower side
Upper side
Press in the handle by tweezers.

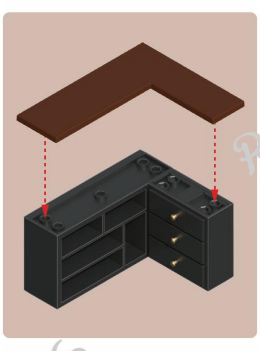

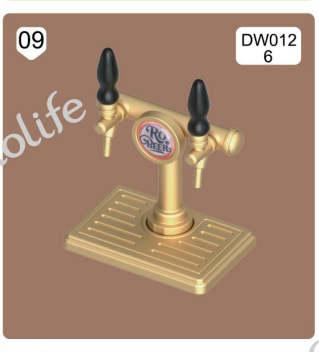

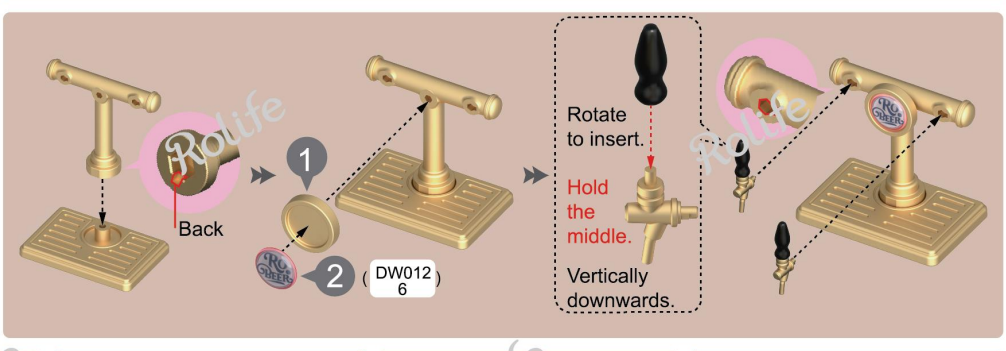
Back
1
2
(DW012
6)
Rotate to insert.

Hold the middle.

Vertically downwards.

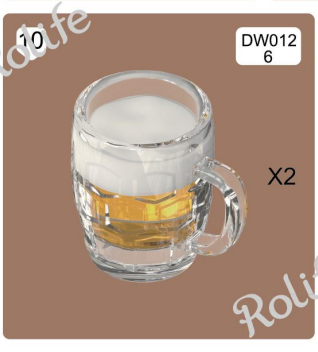
10
DW012
6
X2

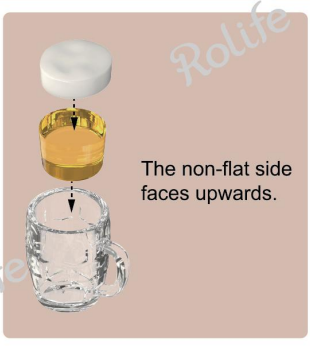
The non-flat side faces upwards.

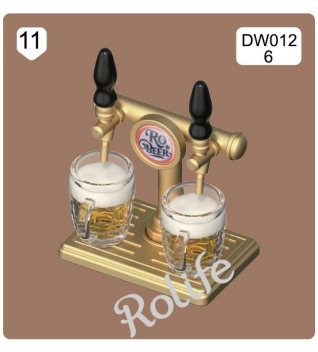

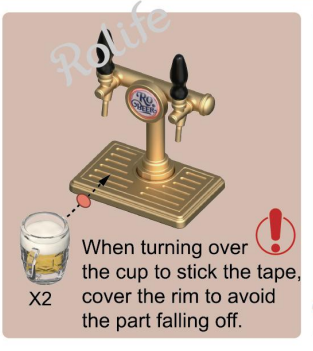

When turning over the cup to stick the tape, cover the rim to avoid the part falling off.

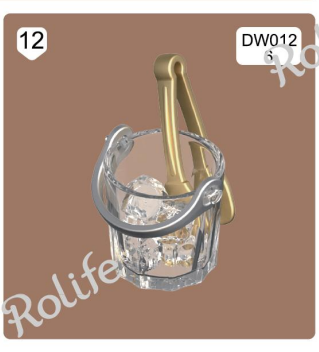

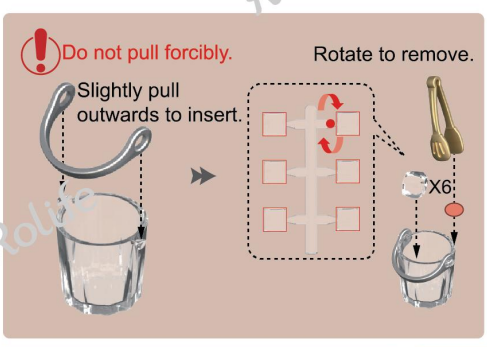

Do not pull forcibly.

Slightly pull outwards to insert.

Rotate to remove.

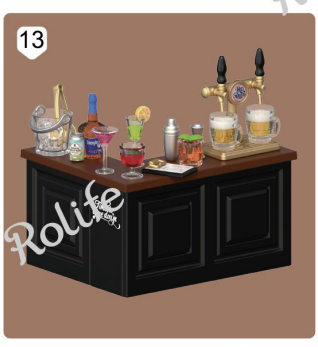

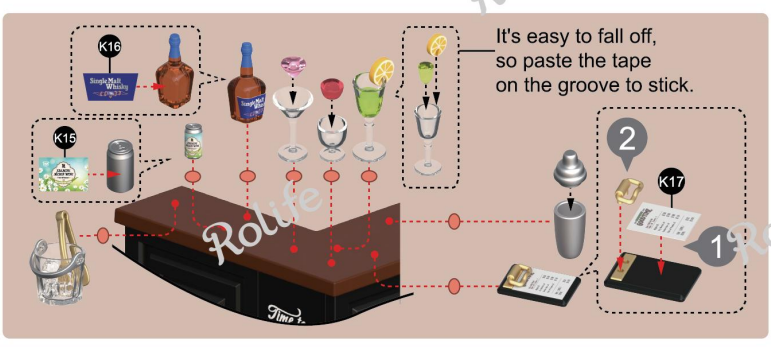
K16
K15
2
K17
1
It's easy to fall off, so paste the tape on the groove to stick.

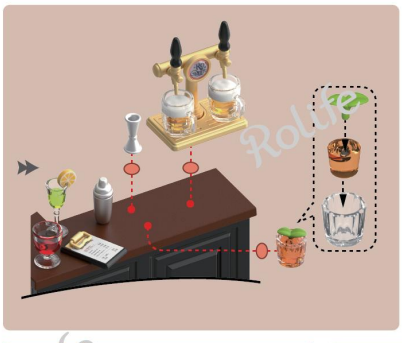

14
DW012
7
X2

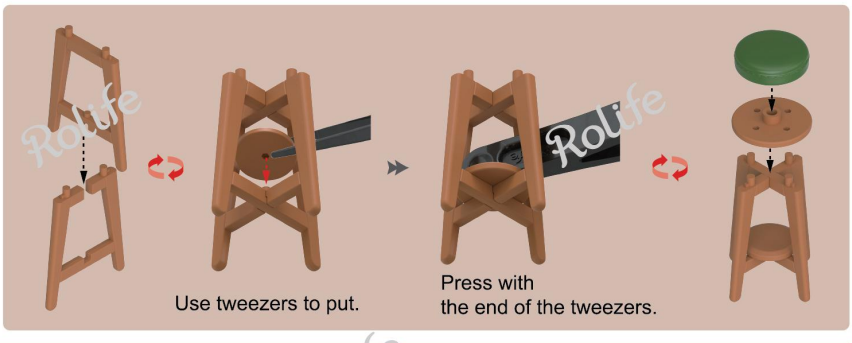
Use tweezers to put.
Press with
the end of the tweezers.

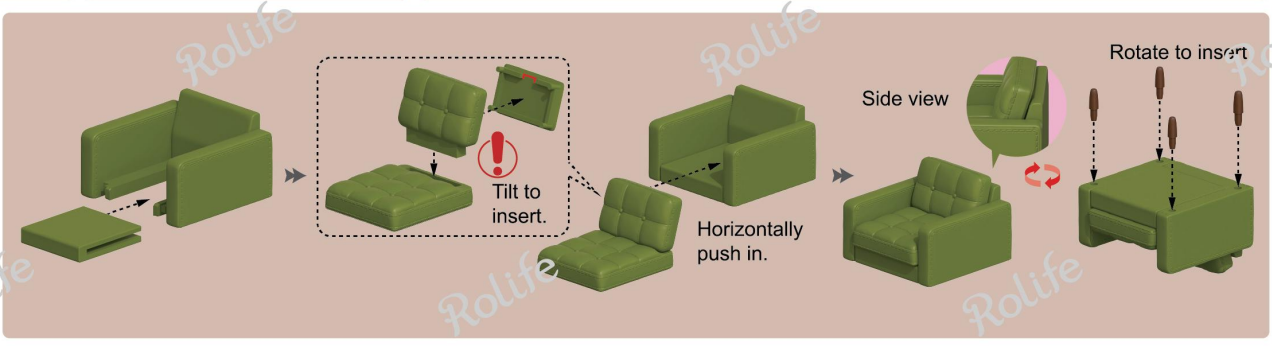
Tilt to
insert.
Horizontally
push in.
Side view
Rotate to insert

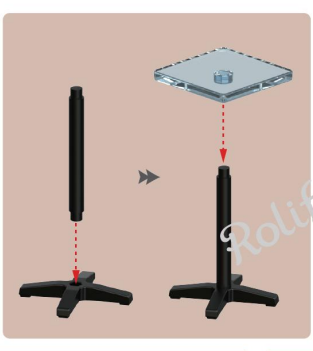

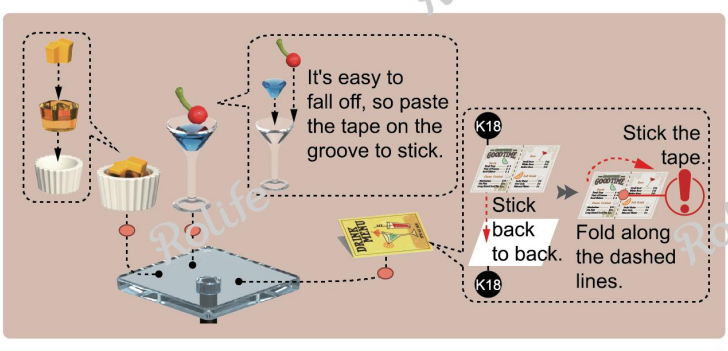
It's easy to
fall off, so paste
the tape on the
groove to stick.
K18
Stick the
tape.
Stick
back
to back.
Fold along
the dashed
lines.
K18

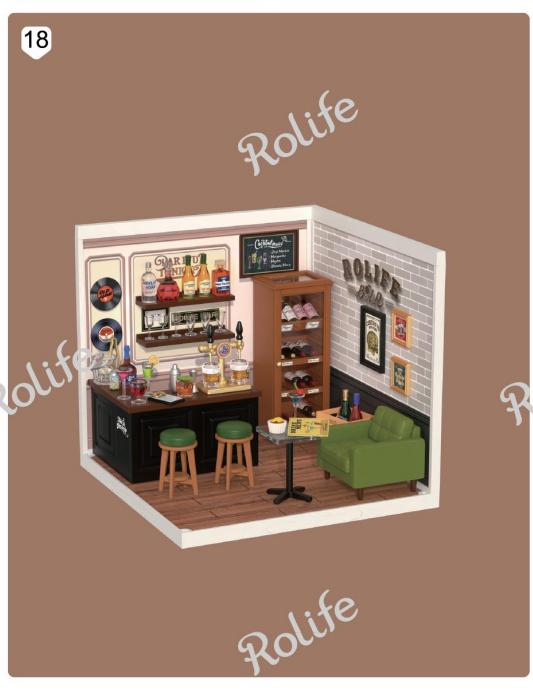

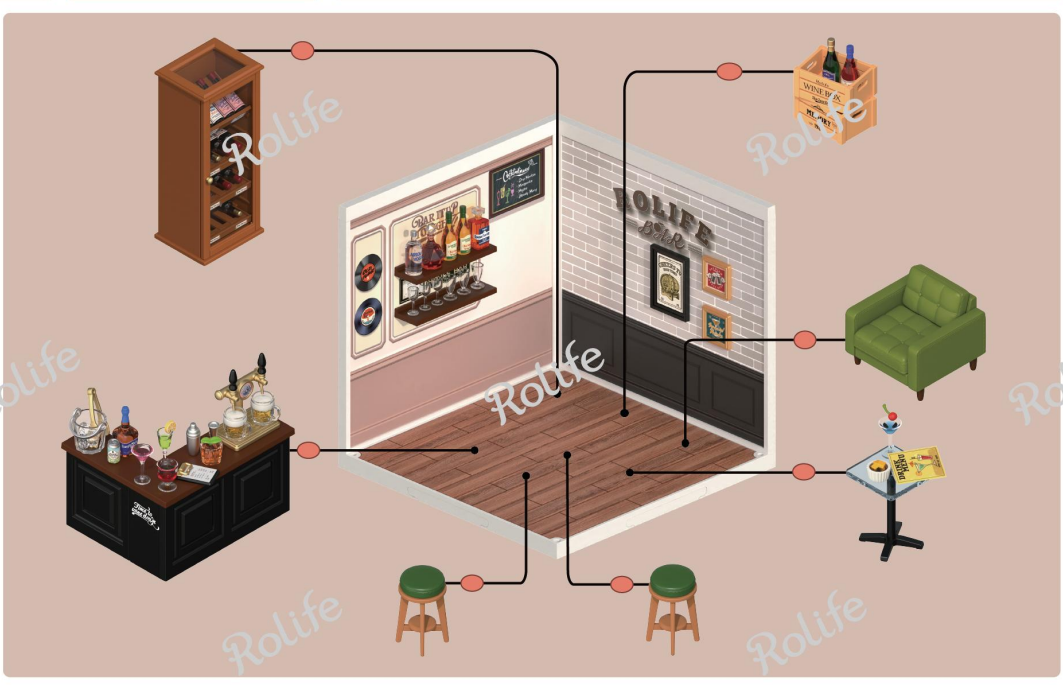

05 Add some other tricks

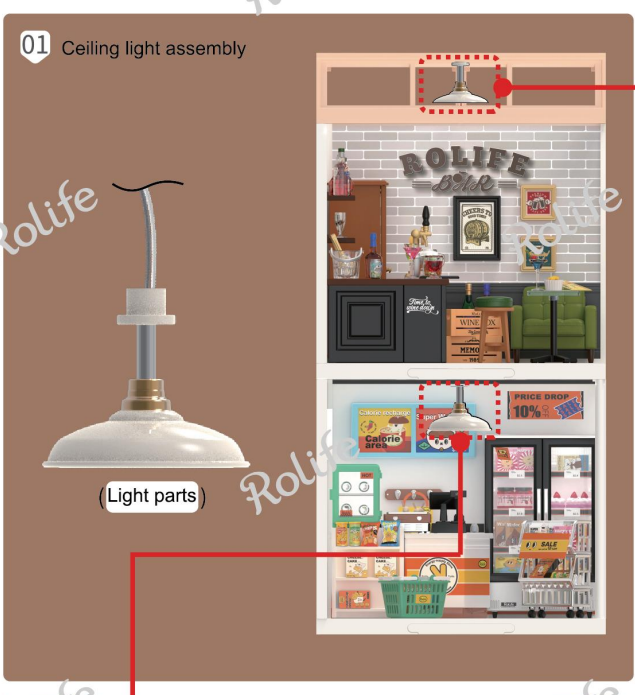
01 Ceiling light assembly
(Light parts)

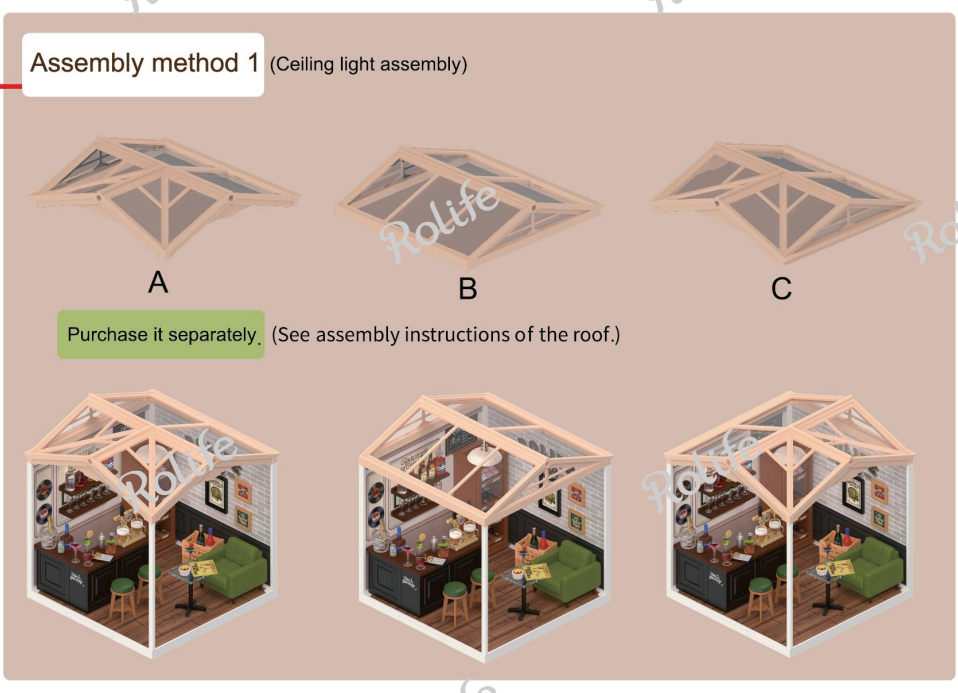
Assembly method 1 (Ceiling light assembly)
A
B
C
Purchase it separately.
(See assembly instructions of the roof.)

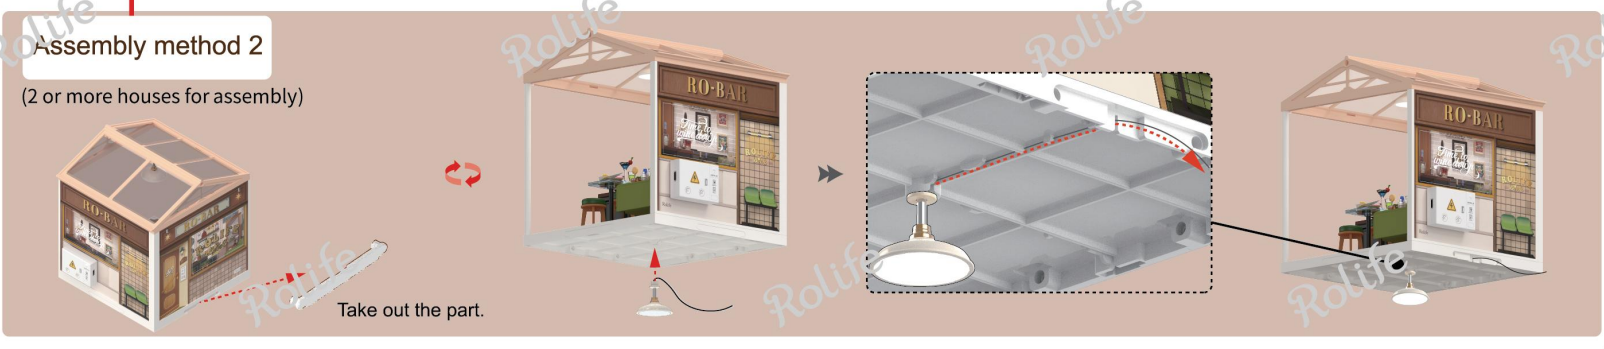
Assembly method 2
(2 or more houses for assembly)
Take out the part.

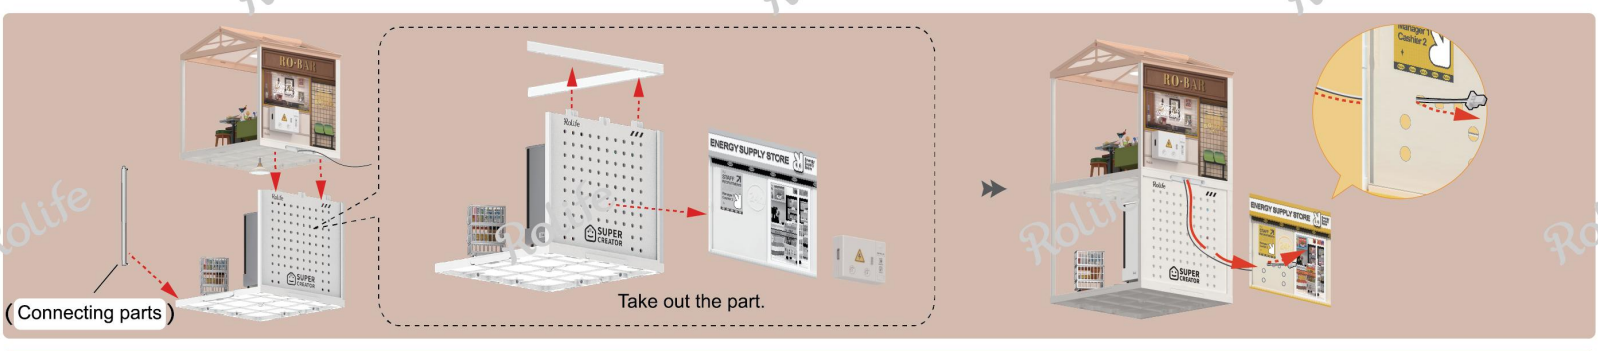
(Connecting parts)
Take out the part.

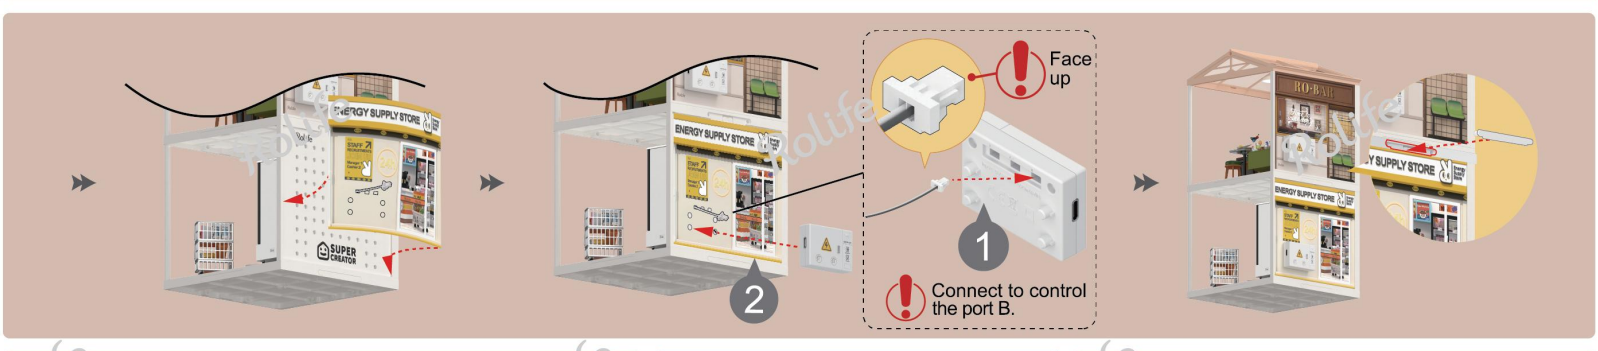
Face
up
1
2
Connect to control
the port B.

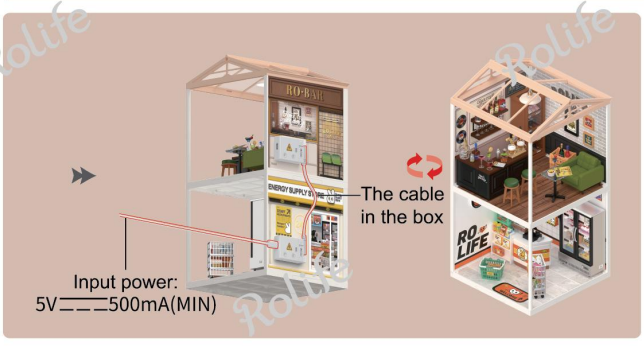
The cable
in the box
Input power:
5V⎓500mA(MIN)

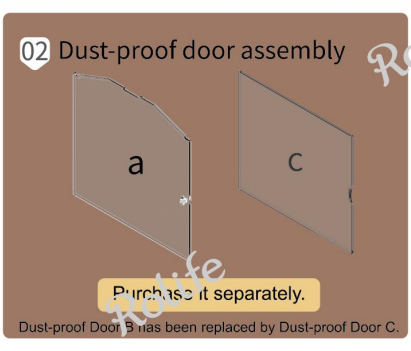
02 Dust-proof door assembly
a
c
Purchase it separately.
Dust-proof Door B has been replaced by Dust-proof Door C.

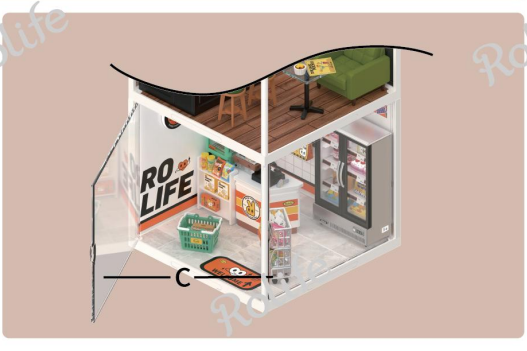

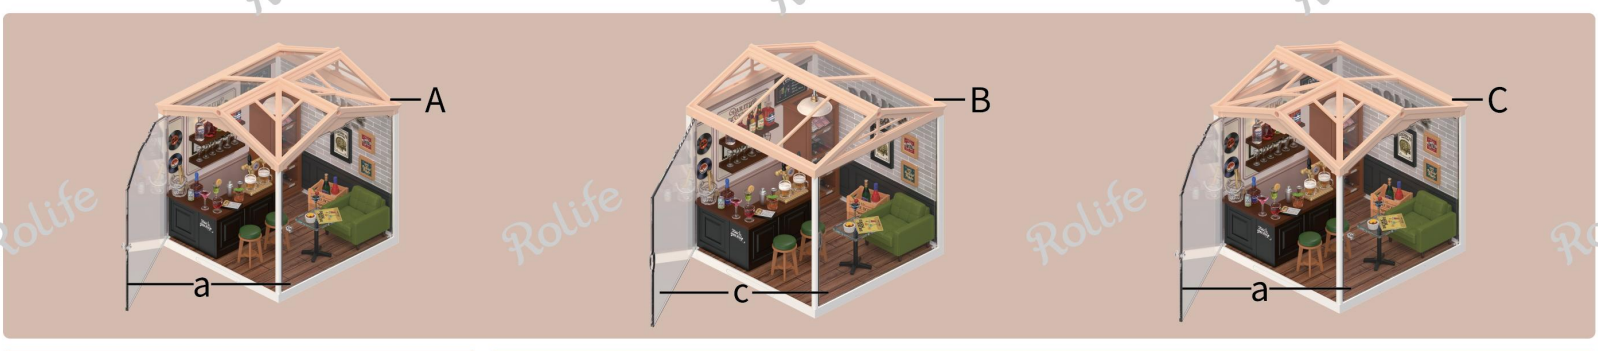

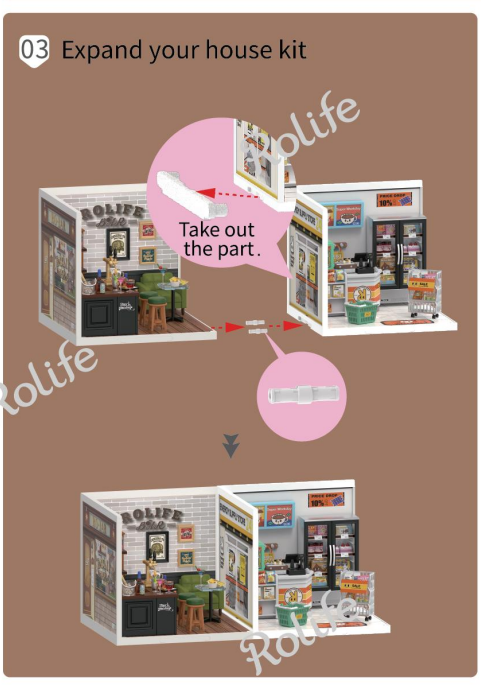
03 Expand your house kit
Take out
the part.

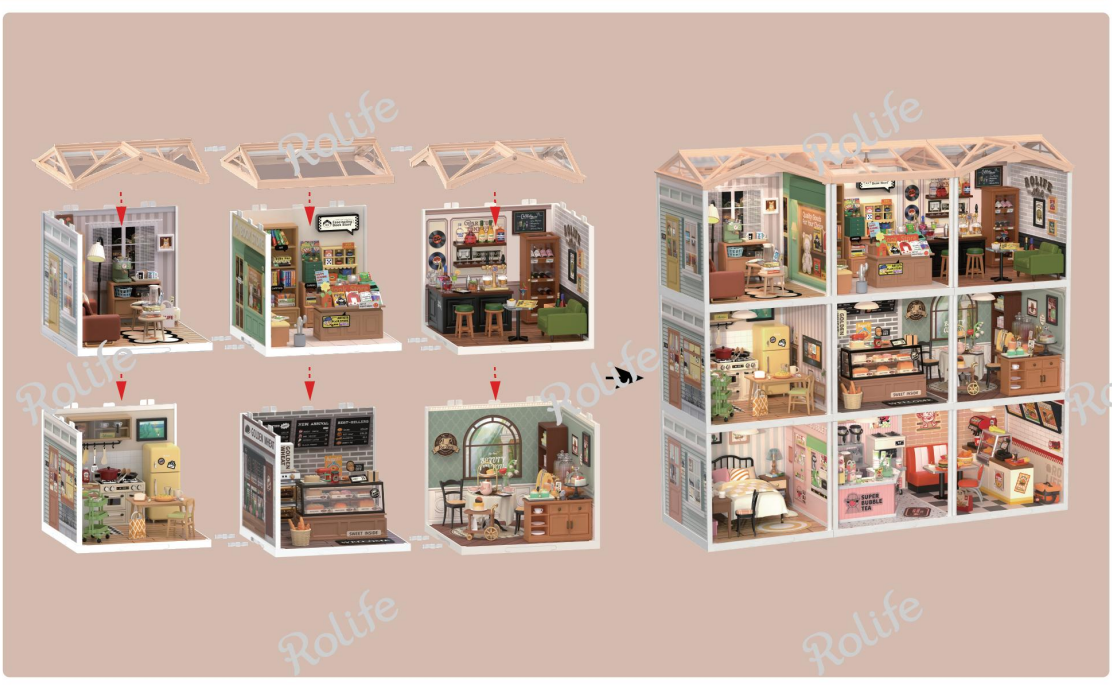

MANUFACTURER:
Robotime C&C (Jiangsu) Co., Ltd.

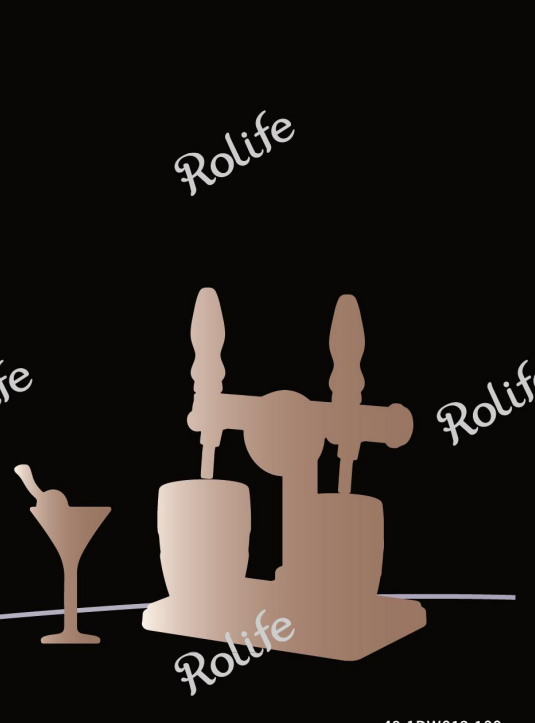ADDRESS:
28 Wenzhou Road, Shuyang, Suqian, Jiangsu, China